

FEATURES

High precision High efficiency High output voltage stability Linear modulation of output voltage Low cost Overcurrent protection Short circuit protection Digital display for output voltage

APPLICATIONS

AHVACN5KV100UABT, is designed for achieving AC-DC conversion from AC voltage to high DC voltage. High voltage power supply is widely used in industrial measurement and control, energy spectrum analysis, and medical equipment such as: X-ray machine, vacuum/plasma processing, semiconductor fabrication equipment, analytical instrumentation, medical diagnostic and therapeutic systems, test equipment, and research and academic applications, etc. **DESCRIPTION**

Connect AC 90~230V input, and then power on. When the potentiometer is in "0", open the high voltage switch, and then adjust the potentiometer clockwise. Observe the digital display readings, and high voltage power supply output

voltage = the reading \times 10V. When the required voltage is achieved, then rotate the potentiometer lock clockwise to lock the potentiometer. This prevents the output voltage changes caused by rotating the potentiometer by accident. High voltage connection wire is used for high voltage output.

SAFETY PRECAUTIONS

High voltage power supply must be connected to ground reliably.

Do not touch the high voltage wire, unless the high voltage power supply is powered off, and the load and internal capacitors are fully discharged.

When the high voltage power supply is powered off, wait for another 5 minutes for fully discharging all the capacitors inside the power supply.

Do not operate the power supply in humid environment, and do not connect the operator to ground.

The internal protection circuit is provided in the high voltage power supply, but the high voltage short circuit shall be avoided.

Make sure the circuit is insulated perfectly, especially between the high voltage output and the surroundings so as to avoid electronic shock.

1161 Ringwood Ct, #110, San Jose, CA 95131, U. S. A. Tel.: (408) 748-9100, Fax: (408) 770-9187

www.analogtechnologies.com

©Copyrights 2000-2021, Analog Technologies, Inc. All Rights Reserved. Updated on 3/9/2021 Email: staff@analogti.com/sales@analogti.com 1



SPECIFICATIONS

Table 1. Characteristics.

 $T_A = 25^{\circ}C$, unless otherwise noted

Parameter		Symbol	Condition	Min.	Тур.	Max.	Unit/Note
AC Input Voltage		VPS		90	110	230	V _{AC}
Quiescent Input Current		I _{INQQ}	$I_{OUT} = 0mA$	10	20	30	mA
Full Load Input Current		I _{INFLD}	$I_{OUT} = 0.1 mA$	20	30	40	mA
Input Voltage Regulation Ratio		$\Delta V_{OUT} / \Delta VPS$	$VPS = 90V \sim 230V$		0.05		%
Output Voltage		V _{OUT}	$I_{OUT} = 0 \sim 0.1 mA$	0		-5000	V
Maximum Output Current		I _{OUTMAX}	$VPS = 90V \sim 230V$			0.1	mA
Load					50		MΩ
Potentiometer Adjustment				10k potentiometer			
Output Modulation Linearity					< 0.1		%
Load Regulation Rate			$I_{OUT} = 0 \sim 0.1 \text{mA}$		≤0.05		%
Instantaneous Short Circuit Current		I _{SC}			<0.1		mA
Full Load Efficiency		η			≥ 70		%
Temperature Coefficient		TCVo	$-20 \sim 50^{\circ}C$		< 0.01		%/°C
Time Drift	Short Time Drift				< 0.05		%/ min
	Long Time Drift				< 0.05		%/h
Output Voltage Temperature Stability			$-20 \sim 50^{\circ}C$		<±0.05		%
Operating Temperature Range		T _{opr}		-20		55	°C
Storage Temperature Range		T _{stg}		-20		80	°C
External Dimensions				180×120×50		mm	
Weight					1192		g
					2.63		lbs
					42.05		Oz

1161 Ringwood Ct, #110, San Jose, CA 95131, U. S. A. Tel.: (408) 748-9100, Fax: (408) 770-9187

©Copyrights 2000-2021, Analog Technologies, Inc. All Rights Reserved. Updated on 3/9/2021 Email: staff@analogti.com/sales@analogti.com 2



PANEL INSTRUCTIONS

Left Panel

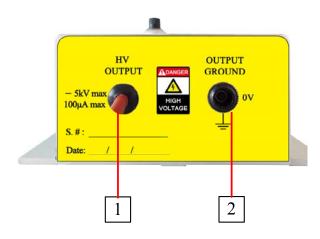


Figure 2. Left Panel

1. HV output: 1m long connection wire outputs -5kV 100µA.

2. Output ground: high voltage power supply output ground terminal.

Front Panel

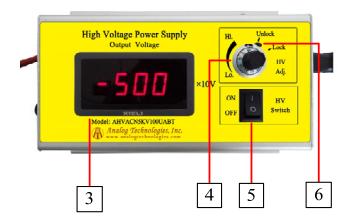


Figure 3. Front Panel

3. Output display: Digital display for output voltage. The actual output voltage = display reading \times 10V.

AHVACN5KV100UABT

4. HV adjustment: 10-turn potentiometer for adjusting output voltage. Rotate it clockwise to increase the output voltage, and the potentiometer resistance = the corresponding scale × 10 Ω . For example, as Figure 4 shows, when the scale is 10, and the frame above the scale shows 1 (1k Ω), then the resistance =10×10 Ω +1k Ω =1.1k Ω , and the like.





5. High voltage ON/OFF switch

6. Potentiometer lock: when turn the lock clockwise, then the potentiometer is locked, so that the POT will not be rotated for any voltage change.

Right Panel



Figure 5. Right Panel

- 7. Main power ON/OFF switch
- 8. Fuse: 250V/2A

9. Input connector: AC input $90 \sim 230V 50/60Hz$ connector.


1161 Ringwood Ct, #110, San Jose, CA 95131, U. S. A. Tel.: (408) 748-9100, Fax: (408) 770-9187

©Copyrights 2000-2021, Analog Technologies, Inc. All Rights Reserved. Updated on 3/9/2021


Email: staff@analogti.com/sales@analogti.com 3



TESTING DATA

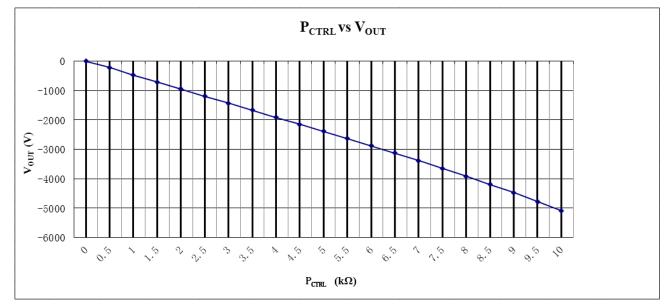

High voltage power supply testing data (Test condition: the load is 50 M Ω)



<u>HV</u> <u>AC</u> <u>N</u> <u>5KV</u> <u>100</u> <u>UA</u> <u>BT</u> Α Max. Out Voltage 100V=100V 5KV=5kV 10KV=10kV Product type: High Voltage Input Voltage $AC = 90V_{AC}$ Max Out Current Polarity Company code: Analog Type: Unit: R5 = 0.5N = negative $\sim 230 V_{AC}$ Power Supply 1 = 1.0Technologies, Inc. MA = mABT = Bench topP = positive100 = 100

Figure 7. Naming Rules of AHVACN5KV100UABT

©Copyrights 2000-2021, Analog Technologies, Inc. All Rights Reserved. Updated on 3/9/2021

Email: staff@analogti.com/sales@analogti.com 4

NAMING INSTRUCTIONS



High Voltage Power Supply

AHVACN5KV100UABT

DIMENSIONS

I. Dimension of the leads.



Figure 8. Leads of AHVACN5KV100UABT

Leads	Diameter (mm)	Length (m)		
Thick brown lead	4.5	1.0		
Power cord	6.5	1.8		

II. Dimension of AHVACN5KV100UABT.

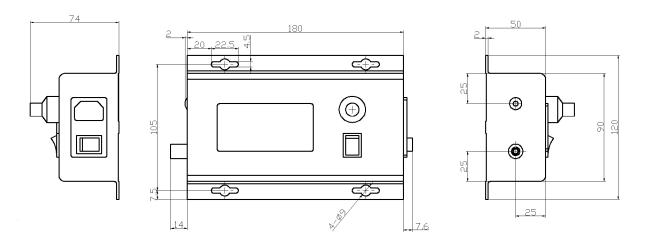


Figure 9. Dimensions for AHVACN5KV100UABT



PRICES

Quantity (pcs)	1~9	10~49	50~99	≥100
AHVACN5KV100UABT	\$399	\$389	\$379	\$369

NOTICE

- 1. ATI warrants performance of its products for one year to the specifications applicable at the time of sale, except for those being damaged by excessive abuse. Products found not meeting the specifications within one year from the date of sale can be exchanged free of charge.
- 2. ATI reserves the right to make changes to its products or to discontinue any product or service without notice, and advise customers to obtain the latest version of relevant information to verify, before placing orders, that information being relied on is current and complete.
- 3. All products are sold subject to the terms and conditions of sale supplied at the time of order acknowledgment, including those pertaining to warranty, patent infringement, and limitation of liability. Testing and other quality control techniques are utilized to the extent ATI deems necessary to support this warranty. Specific testing of all parameters of each device is not necessarily performed, except those mandated by government requirements.
- 4. Customers are responsible for their applications using ATI components. In order to minimize risks associated with the customers' applications, adequate design and operating safeguards must be provided by the customers to minimize inherent or procedural hazards. ATI assumes no liability for applications assistance or customer product design.
- 5. ATI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right of ATI covering or relating to any combination, machine, or process in which such products or services might be or are used. ATI's publication of information regarding any third party's products or services does not constitute ATI's approval, warranty or endorsement thereof.
- IP (Intellectual Property) Ownership: ATI retains the ownership of full rights for special technologies and/or techniques embedded in its products, the designs for mechanics, optics, plus all modifications, improvements, and inventions made by ATI for its products and/or projects.