

Figure 1. Physical Photo of A1UHVACP5KV5MARM

#### **FEATURES**

High precision

High efficiency

High output voltage stability

Linear modulation of output voltage

Overcurrent protection

Arc and Short circuit protection

Digital display for output voltage and current

OEM Customization Available

#### **APPLICATIONS**

A1UHVACP5KV5MARM, is designed for achieving AC-DC conversion from AC voltage to high DC voltage. This series high voltage power supply is rack-mounted, and is mainly used in ion beam injection, semiconductor technology, electron beam welding, capacitor charging, high power radio frequency transmitter, accelerator, CW laser, high voltage insulation test, lithography technology, X-ray system, electrostatic applications, scientific experiments, industrial applications and other fields.

#### DESCRIPTION

The power supply comes with high stability, high reliability, high accuracy of output voltage regulation, and continuously adjustable output voltage; low time drift and temperature drift; it adopts modular design inside the power supply, with

protection against overvoltage, overcurrent, and arcing; the control interface uses industrial interface, with industrial design from circuit schematic to the overall structure; high integration and high detection accuracy; it has functions such as start-up soft-start and control; convenient for control, easy operation; the internal transformation of the power supply can be made based on the actual needs of the customer

#### **SAFETY PRECAUTIONS**

High voltage power supply must be connected to ground reliably.

Do not touch the high voltage wire, unless the high voltage power supply is powered off, and the load and internal capacitors are fully discharged.

When the high voltage power supply is powered off, wait for another 5 minutes for fully discharging all the capacitors inside the power supply.

Do not operate the power supply in humid environment, and do not connect the operator to ground.

The internal protection circuit is provided in the high voltage power supply, but the high voltage short circuit shall be avoided.

Make sure the circuit is insulated perfectly, especially between the high voltage output and the surroundings so as to avoid electronic shock.



### **SPECIFICATIONS**

Table 1. Characteristics.  $T_A = 25$ °C, unless otherwise noted

Para	ımeter	Symbol	Condition	Min.	Тур.	Max.	Unit/Note
AC Input Voltage		$V_{\mathrm{VPS}}$		100		230	V <sub>AC</sub>
Quiescent Input Current		$I_{\rm INQQ}$	$I_{OUT} = 0 \text{mA}$ $V_{VPS} = 110 \text{ V}_{AC}$	70	80	90	mA
Full Load I	Full Load Input Current		$I_{OUT} = 5 \text{mA}$ $V_{VPS} = 110 \text{ V}_{AC}$	240	250	260	mA
Outpu	t Voltage	$V_{\mathrm{OUT}}$	$I_{OUT} = 0 \sim 5 \text{mA}$	0		5000	V
Maximum C	Output Current	$I_{OUTMAX} \\$	Full load			5	mA
Ri	pple		$I_{OUT} = 5mA$		< 0.01		$%V_{P-P}$
L	oad				1		ΜΩ
Potentiomet	Potentiometer Adjustment			10k potentiometer or remote control $0 \sim +5V$			
Output Modu	lation Linearity				< 0.01		%
Voltage	Load		$I_{OUT} = 0 \sim 5 \text{mA}$		< 0.01		%+500mV
Regulation	Input		$V_{VPS} = 110V \sim 120V$		< 0.01		%+500mV
Current	Load		$I_{OUT} = 0 \sim 5 \text{mA}$		< 0.01		%+100uA
Regulation	Input		$V_{VPS} = 110V \sim 120V$		< 0.01		%
Instantaneous Sh	ort Circuit Current	$I_{SC}$			<20		mA
Full Load	Efficiency	η			≥75		%
Temperatur	re Coefficient	TCVo	0 ~ 50°C		< 0.005		%/°C
Ti. D.:0	Short Time Drift		After 30 minute		< 0.05		%/ min
Time Drift	Long Time Drift		warm up		< 0.05		%/h
Output Voltage Te	emperature Stability		0 ~ 50°C		<±0.01		%
Operating Te	Operating Temperature Range			0		50	°C
Storage Temp	Storage Temperature Range			-40		85	°C
TT - 110				20%-85% relative humidity		umidity	
Humidity				non-condensing		g	
External Dimensions				482.5×350×44 mm		mm	
				19×13.78×1.73 inch		inch	
					3.6		kg
We	eight				7.93		lbs
					126.98		Oz

#### PANEL INSTRUCTIONS

### **Front Panel**

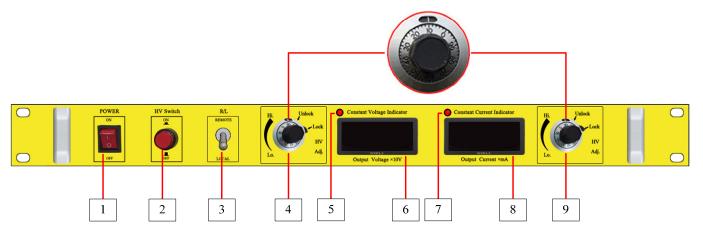


Figure 2. Front Panel

Table 2. Definitions of front panel keys

No.	Signal	Signal Parameters		
1	Power	When the power is turned on, the indicator is on; when the power is turned off, the indicator is off.		
2	HV Switch	High voltage ON, the indicator is on o		
3	R/L	When the switch is in Remote, it is controlled remotely; when the switch is in Local, it is controlled locally.		
4	HV Adjustment	10-turn potentiometer for adjusting output voltage. Rotate it clockwise to increase the output voltage, and the potentiometer resistance = the corresponding scale $\times$ 10 $\Omega$ . For example, when the scale is 10, and the frame above the scale shows 1 (1k $\Omega$ ), then the resistance =10×10 $\Omega$ +1k $\Omega$ =1.1k $\Omega$ , and the like. HV output: 1.5m long connection wire outputs 5kV.		
5	Constant Limit Indicator	When the voltage exceeds the preset voltage, the indicator is on.		
6	Output Voltage Display	Digital display for the output voltage. The actual output voltage = the reading $\times$ 10V.		
7	Constant Limit Indicator	When the current exceeds the preset current, the indicator is on.		
8	Output Current Display	Digital display for the output current. The actual output current = the reading $\times$ mA.		
9	Current Adjustment	10-turn potentiometer for adjusting output voltage. Rotate it clockwise to increase the output voltage, and the potentiometer resistance = the corresponding scale $\times$ 10 $\Omega$ . For example, when the scale is 10, and the frame above the scale shows 1 (1k $\Omega$ ), then the resistance =10×10 $\Omega$ +1k $\Omega$ =1.1k $\Omega$ , and the like. HV output: 1.5m long connection wire outputs 5mA.		

#### **Back Panel**



Figure 3. Front Panel

Table 3. Definitions of back panel function keys

No.	Signal	Signal Parameters
10	HV Output	High voltage output port with removable 1m long connection wire outputting 5kV and 5mA.
11	Output Ground	High voltage power supply output ground terminal.
12	Remote	8-pin connector. Refer to the following Table 4 and Figure 4 for remote control function.
13	Ac Input Voltage Switch	110V or 220V Input voltage selector switch
14	AC Main Power Input	AC input 110V\220V 50/60Hz connector.

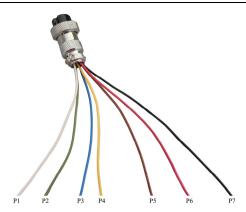


Figure 4. 8-pin Connector

Table 4. 8-pin connector.

Pin	Signal	Signal Parameters	Lead the color	
P1	Remote Voltage Program In	0 to 5V=0 to 100% rated output.	White	
P2	Voltage Monitor	0 to 5V=0 to 100% rated output.	Green	
Р3	Current Monitor	0 to 5V=0 to 100% rated output.	Blue	
P4	Remote Current Program In	0 to 5V=0 to 100% rated output.	Yellow	
P5	Shutdown	A logic low 0.8V or a 0V on the SDN pin will turn the device off.	Brown	
		When SDN is in logic high 1.2V <sdn<5v left="" or="" td="" unconnected,<=""><td></td></sdn<5v>		
		the product is working well.		

P6	Voltage Reference	+5VDC Reference	Red
P7	GND	Signal ground	Black
P8	NC	No connection	

#### **TESTING DATA**

High voltage power supply testing data (Test condition: the load is  $1M\Omega$ ).

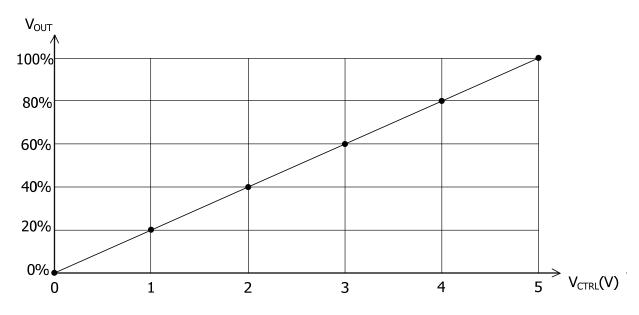


Figure 5. V<sub>CTRL</sub> vs. V<sub>OUT</sub>

#### NAMING INSTRUCTIONS

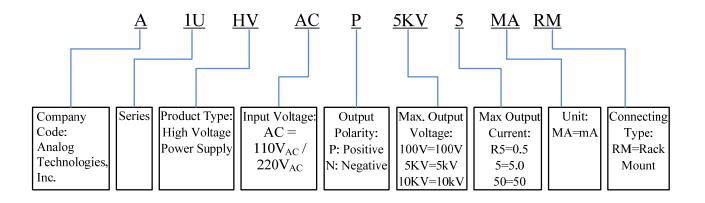


Figure 6. Naming Rules of A1UHVACP5KV5MARM



#### **DIMENSIONS**

### I. Dimension of the leads.

Leads	Diameter (mm)	Length (m)	
High voltage output wire	4.5	1.5	
Power cord	6.5	1.8	

### II. Dimension of A1UHVACP5KV5MARM.

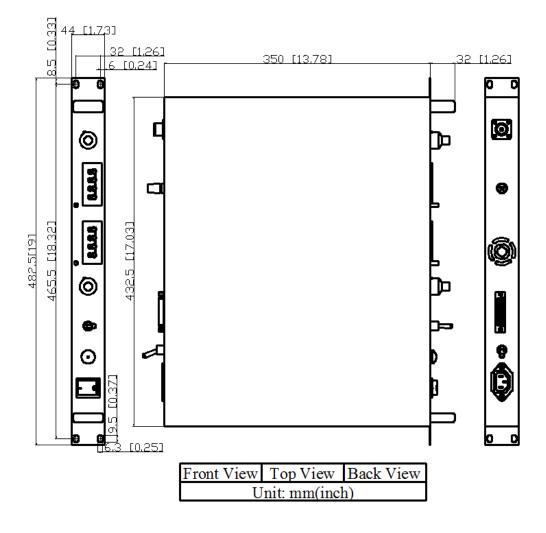


Figure 7. Dimensions for A1UHVACP5KV5MARM

# **High Voltage Power Supply**



## A1UHVACP5KV5MARM

#### **NOTICE**

- 1. ATI warrants performance of its products for one year to the specifications applicable at the time of sale, except for those being damaged by excessive abuse. Products found not meeting the specifications within one year from the date of sale can be exchanged free of charge.
- 2. ATI reserves the right to make changes to its products or to discontinue any product or service without notice, and advise customers to obtain the latest version of relevant information to verify, before placing orders, that information being relied on is current and complete.
- 3. All products are sold subject to the terms and conditions of sale supplied at the time of order acknowledgment, including those pertaining to warranty, patent infringement, and limitation of liability. Testing and other quality control techniques are utilized to the extent ATI deems necessary to support this warranty. Specific testing of all parameters of each device is not necessarily performed, except those mandated by government requirements.
- 4. Customers are responsible for their applications using ATI components. In order to minimize risks associated with the customers' applications, adequate design and operating safeguards must be provided by the customers to minimize inherent or procedural hazards. ATI assumes no liability for applications assistance or customer product design.
- 5. ATI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right of ATI covering or relating to any combination, machine, or process in which such products or services might be or are used. ATI's publication of information regarding any third party's products or services does not constitute ATI's approval, warranty or endorsement thereof.
- 6. IP (Intellectual Property) Ownership: ATI retains the ownership of full rights for special technologies and/or techniques embedded in its products, the designs for mechanics, optics, plus all modifications, improvements, and inventions made by ATI for its products and/or projects.