

# **High Voltage Power Supply**

A2UHVACP40KV10MARM



#### Figure 1. Physical Photo of A2UHVACP40KV10MARM

#### FEATURES

High precision High efficiency High output voltage stability Linear modulation of output voltage Overcurrent protection Arc and Short circuit protection Digital display for output voltage and current OEM Customization Available

#### APPLICATIONS

A2UHVACP40KV10MARM, is designed for achieving AC-DC conversion from AC voltage to high DC voltage isolated power supply. This series high voltage power supply is rack-mounted, and is mainly used in ion beam injection, semiconductor technology, electron beam welding, capacitor charging, high power radio frequency transmitter, accelerator, CW laser, high voltage insulation test, lithography technology, X-ray system, electrostatic applications, scientific experiments, industrial applications and other fields.

### DESCRIPTION

The power supply comes with high stability, high reliability,

high accuracy of output voltage regulation, and continuously adjustable output voltage; low time drift and temperature drift; it adopts modular design inside the power supply, with protection against overvoltage, overcurrent, and arcing; the control interface uses industrial interface, with industrial design from circuit schematic to the overall structure; high integration and high detection accuracy; it has functions such as start-up soft-start and control; convenient for control, easy operation; the internal transformation of the power supply can be made based on the actual needs of the customer.

#### SAFETY PRECAUTIONS

High voltage power supply must be connected to ground reliably.

Do not touch the high voltage wire, unless the high voltage power supply is powered off, and the load and internal capacitors are fully discharged.

When the high voltage power supply is powered off, wait for another 5 minutes for fully discharging all the capacitors inside the power supply.

Do not operate the power supply in humid environment, and do not connect the operator to ground.

The internal protection circuit is provided in the high voltage power supply, but the high voltage short circuit shall be

1161 Ringwood Ct, #110, San Jose, CA 95131, U. S. A. Tel.: (408) 748-9100, Fax: (408) 770-9187 ©Copyrights 2000-2022, Analog Technologies, Inc. All Rights Reserved. Updated on 5/11/2022 www.analogtechnologies.com

1

Email: staff@analogti.com/sales@analogti.com



### avoided.

Make sure the circuit is insulated perfectly, especially

between the high voltage output and the surroundings so as to avoid electronic shock.

## **SPECIFICATIONS**

Table 1. Characteristics.  $T_A = 25^{\circ}C$ , unless otherwise noted

| Par                         | ameter                  | Symbol              | Condition  | Min.  | Тур.     | Max.        | Unit/Note         |
|-----------------------------|-------------------------|---------------------|--|---|----------|-------------|-------------------|
| AC Input Voltage            |                         | V <sub>VPS</sub>    |  | 100   |          | 230         | V <sub>AC</sub>   |
|                             |                         | I <sub>INQQ</sub>   | $I_{OUT} = 0 \text{ mA}$ $V_{VPS} = 110 \text{ V}_{AC}$  | 1100  | 1200     | 1300<br>650 | mA                |
| Quiescent                   | Quiescent Input Current |                     | $I_{OUT} = 0 \text{ mA}$ $V_{VPS} = 220 \text{ V}_{AC}$  | 550   | 600      |             | mA                |
| <b>F</b>                    |                         |                     | $I_{OUT} = 10 \text{mA}$ $V_{VPS} = 110 V_{AC}$          | 4.7   | 4.8      | 4.9         | А                 |
| Full Load Input Current     |                         | I <sub>INFLD</sub>  | $I_{OUT} = 10 \text{ mA}$ $V_{VPS} = 220 \text{ V}_{AC}$ | 2.3   | 2.4      | 2.5         | А                 |
| Outp                        | ut Voltage              | V <sub>OUT</sub>    | $I_{OUT} = 0 \sim 10 mA$                                 | 0   |          | 40000       | V                 |
| Maximum                     | Output Current          | I <sub>OUTMAX</sub> | Full load  |   |          | 10          | mA                |
| R                           | lipple                  |                     | Bandwidth=1MHz   |   | < 0.1    |             | %V <sub>P-P</sub> |
| Load                        |                         |                     |  |   | 4        |             | MΩ                |
| Potentiometer Adjustment    |                         |                     |  | 10k potentiometer or<br>remote control $0 \sim +5V$ |          |             |                   |
| Output Mod                  | ulation Linearity       |                     |  |   | < 0.1    |             | %                 |
| Voltage                     | Load                    |                     | $I_{OUT} = 0 \sim 10 mA$                                 |   | < 0.1    |             | %                 |
| Regulation                  | Input                   |                     | $V_{VPS} = 110V \sim 130V$                               |   | <±0.1    |             | %                 |
| Current                     | Load                    |                     | $I_{OUT} = 0 \sim 10 mA$                                 |   | <0.1     |             | %                 |
| Regulation                  | Input                   |                     | $V_{VPS}=110V\sim 130V$                                  |   | <0.1     |             | %                 |
| Full Load Efficiency        |                         | η                   |  |   | ≥75      |             | %                 |
| Temperatu                   | re Coefficient          | TCV <sub>0</sub>    | $0 \sim 50^{\circ} C$                                    |   | < 0.1    |             | %/°C              |
| Time Drift                  | Short Time Drift        |                     | After 30 minute's  |   | <0.1     |             | %/ min            |
| Time Drift                  | Long Time Drift         |                     | warming up   |   | < 0.5    |             | %/h               |
| Output Voltage              | Cemperature Stability   |                     | $0 \sim 50^{\circ} C$                                    |   | <±0.1    |             | %                 |
| Operating Temperature Range |                         | T <sub>opr</sub>    |  | 0   |          | 50          | °C                |
| Storage Temperature Range   |                         | $T_{stg}$           |  | -20   |          | 85          | °C                |
| Humidity                    |                         |                     |  | 20%-85% relative humidity<br>non-condensing         |          | •           |                   |
| Esternal D'                 |                         |                     |  | 482.5×400×88 mm                                     |          | mm          |                   |
| External Dimensions         |                         |                     |  | 19  | ×15.75×3 | 6.46        | inch              |
| W                           | /eight                  |                     |  |   | 10       |             | kg                |

1161 Ringwood Ct, #110, San Jose, CA 95131, U. S. A. Tel.: (408) 748-9100, Fax: (408) 770-9187 ©Copyrights 2000-2022, Analog Technologies, Inc. All Rights Reserved. Updated on 5/11/2022 www.analogtechnologies.com

Email: staff@analogti.com/sales@analogti.com 2




# High Voltage Power Supply

# A2UHVACP40KV10MARM

|  |  | 22.05  | lbs |
|--|--|--------|-----|
|  |  | 352.74 | Oz  |

### PANEL INSTRUCTIONS

**Front Panel** 

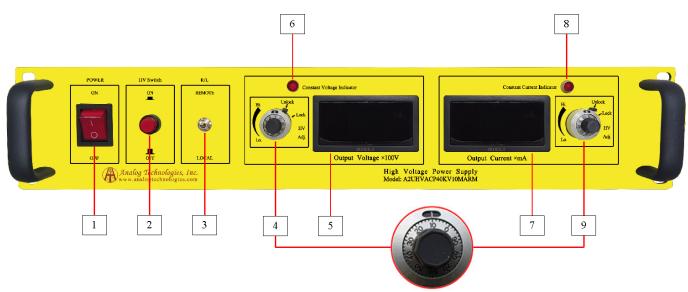

#### Figure 2. Front Panel

| No. | Signal                     | Signal Parameters   |
|-----|----------------------------|---|
| 1   | Power                      | When the power is turned on, the indicator is on; when the power is turned off, the indicator is off.   |
| 2   | HV Switch                  | High voltage turned on, the indicator is on; High voltage turned off, the indicator is off.   |
| 3   | R/L                        | When the switch is in Remote, it is controlled remotely; when the switch is in Local, it is controlled locally.   |
| 4   | HV Adjustment              | 10-turn potentiometer for adjusting output voltage. Rotate it clockwise to increase the output voltage, and the potentiometer resistance = the corresponding scale × 10 $\Omega$ . For example, when the scale is 10, and the frame above the scale shows 1 (1k $\Omega$ ), then the resistance =10×10 $\Omega$ +1k $\Omega$ =1.1k $\Omega$ , and the like.<br>HV output: 1.5m long connection wire outputs 40kV. |
| 5   | Output Voltage Display     | Digital display for the output voltage. Do not show if the voltage is positive or negative.   |
| 6   | Constant Voltage Indicator | When it is working under constant voltage, the indicator is on.   |

### Table 2. Definitions of front panel keys

1161 Ringwood Ct, #110, San Jose, CA 95131, U. S. A. Tel.: (408) 748-9100, Fax: (408) 770-9187 ©Copyrights 2000-2022, Analog Technologies, Inc. All Rights Reserved. Updated on 5/11/2022



| 7 | Output Current Display     | Digital display for the output current. The actual output current = the reading $\times$ mA.  |
|---|----------------------------|---|
| 8 | Constant Current Indicator | When it is working under constant current, the indicator is on.   |
| 9 | Current Adjustment         | 10-turn potentiometer for adjusting output voltage. Rotate it clockwise to increase the output voltage, and the potentiometer resistance = the corresponding scale × 10 $\Omega$ . For example, when the scale is 10, and the frame above the scale shows 1 (1k $\Omega$ ), then the resistance =10×10 $\Omega$ +1k $\Omega$ =1.1k $\Omega$ , and the like.<br>HV output: 1.5m long connection wire outputs 10mA. |

### **Back Panel**

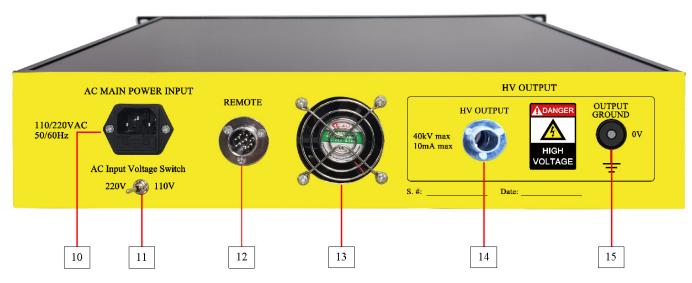


Figure 3. Front Panel

Table 3. Definitions of back panel function keys

| No. | Signal                  | Signal Parameters  |
|-----|-------------------------|--|
| 10  | AC Main Power Input     | AC input 110V/220V, 50/60Hz connector.   |
| 11  | AC Input Voltage Switch | Before connecting the AC voltage, make sure the selected input voltage is consistent with the connected voltage, e.g., when the switch is in 110V input, the connected AC voltage can be 100V to 130V. |
| 12  | Remote                  | 8-pin connector. Refer to the following Table 4 and Figure 4 for remote control function.  |
| 13  | Ventilation Hole        | Ventilation hole of fan or air.  |
| 14  | HV Output               | High voltage output port with removable 1m long connection wire outputting 40kV and 10mA.  |
| 15  | Output Ground           | High voltage power supply output ground terminal.  |

 1161 Ringwood Ct, #110, San Jose, CA 95131, U. S. A. Tel.: (408) 748-9100, Fax: (408) 770-9187

 ©Copyrights 2000-2022, Analog Technologies, Inc. All Rights Reserved. Updated on 5/11/2022

 Email: s

www.analogtechnologies.com

Email: staff@analogti.com/sales@analogti.com 4



# High Voltage Power Supply

A2UHVACP40KV10MARM

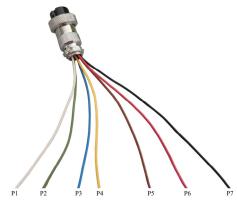



Figure 4. 8-pin Connector

| Table 4. | 8-pin | connector. |
|----------|-------|------------|
|----------|-------|------------|

| Pin | Signal                    | Signal Parameters  | Lead Color |
|-----|---------------------------|--|------------|
| P1  | Remote Voltage Program In | 0 to $5V=0$ to 100% rated output.                                  | White      |
| P2  | Voltage Monitor           | 0 to $5V=0$ to $100\%$ rated output.                               | Green      |
| P3  | Current Monitor           | Current Monitor 0 to 5V=0 to 100% rated output.                    |            |
| P4  | Remote Current Program In | 0 to 5V=0 to 100% rated output.                                    | Yellow     |
| P5  | Shutdown                  | A logic low <0.8V or a 0V on the SDN pin will turn the device off. | Brown      |
|     |                           | When SDN is in logic high >1.2V or left unconnected, it is working |            |
|     |                           | well. The maximum voltage allowed on the SDN pin is 5V.            |            |
| P6  | Voltage Reference         | +5VDC Reference $I_{REF} < 5mA$                                    | Red        |
| P7  | GND                       | Signal ground  | Black      |
| P8  | NC                        | No connection  |            |

Note: Please separate the wires of the remote control end or connect the tails correspondingly. Then connect it with the machine to avoid short circuit damages to internal components.

#### NAMING INSTRUCTIONS

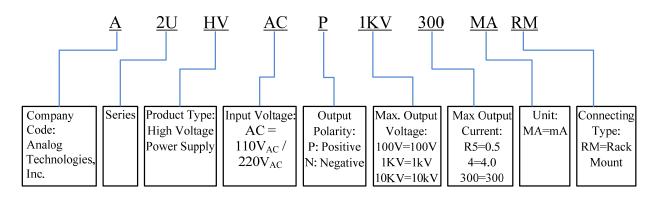

1161 Ringwood Ct, #110, San Jose, CA 95131, U. S. A. Tel.: (408) 748-9100, Fax: (408) 770-9187 www.analogtechnologies.com Email: staff@analogti.com/sales@analogti.com

©Copyrights 2000-2022, Analog Technologies, Inc. All Rights Reserved. Updated on 5/11/2022

5



### Figure 5. Naming Rules of A2UHVACP40KV10MARM

# **TESTING DATA**

High voltage power supply testing data (Test condition: the load is  $4M\Omega$ ).

The measured output voltage, V<sub>OUT</sub>, corresponding to the control port input voltage, V<sub>CTRL</sub>, is shown in Figure 6.


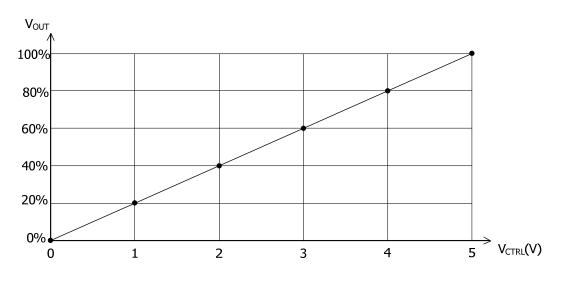


Figure 6. VCTRL vs. VVOUT

#### DIMENSIONS

Dimension of A2UHVACP40KV10MARM.

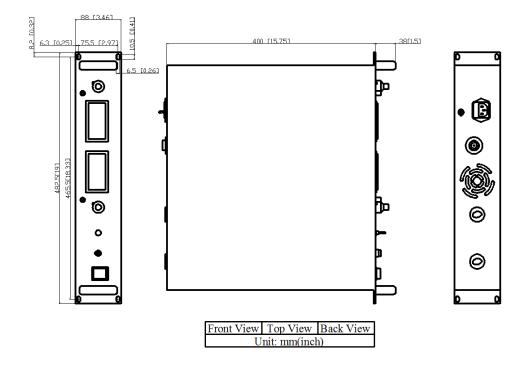

1161 Ringwood Ct, #110, San Jose, CA 95131, U. S. A. Tel.: (408) 748-9100, Fax: (408) 770-9187 ©Copyrights 2000-2022, Analog Technologies, Inc. All Rights Reserved. Updated on 5/11/2022



Figure 7. Dimensions for A2UHVACP40KV10MARM

# NOTICE

- 1. ATI warrants performance of its products for one year to the specifications applicable at the time of sale, except for those being damaged by excessive abuse. Products found not meeting the specifications within one year from the date of sale can be exchanged free of charge.
- 2. ATI reserves the right to make changes to its products or to discontinue any product or service without notice, and advise customers to obtain the latest version of relevant information to verify, before placing orders, that information being relied on is current and complete.
- 3. All products are sold subject to the terms and conditions of sale supplied at the time of order acknowledgment, including those pertaining to warranty, patent infringement, and limitation of liability. Testing and other quality control techniques are utilized to the extent ATI deems necessary to support this warranty. Specific testing of all parameters of each device is not necessarily performed, except those mandated by government requirements.
- 4. Customers are responsible for their applications using ATI components. In order to minimize risks associated with the customers' applications, adequate design and operating safeguards must be provided by the customers to minimize inherent or procedural hazards. ATI assumes no liability for applications assistance or customer product design.
- 5. ATI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right of ATI covering or relating to any combination, machine, or process in which such products or services might be or are used. ATI's publication of information regarding any third party's products or services does not constitute ATI's approval, warranty or endorsement thereof.
- 6. IP (Intellectual Property) Ownership: ATI retains the ownership of full rights for special technologies and/or techniques embedded in its products, the designs for mechanics, optics, plus all modifications, improvements, and inventions made by ATI for its products and/or projects.